


How to Change Default Password of BSNL Modem

Step 1 : Check your LAN Connection

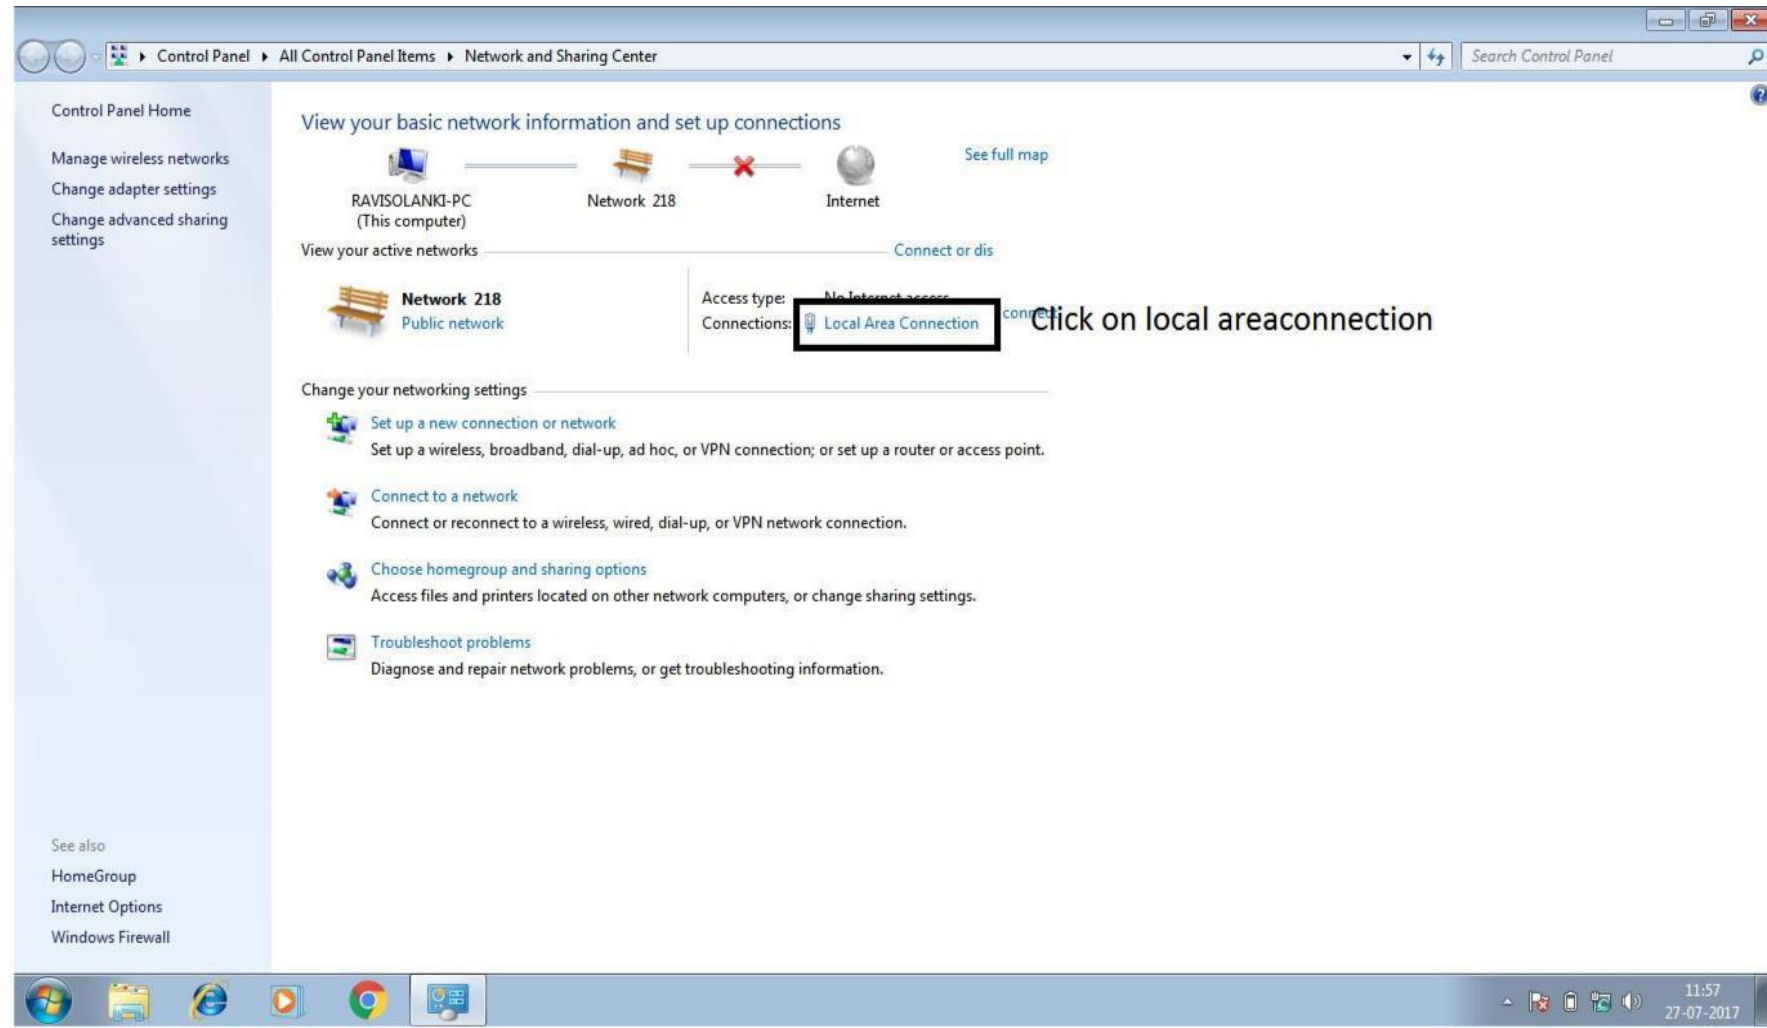

Control Panel Home

- Manage wireless networks
- Change adapter settings
- Change advanced sharing settings

View your basic network information and set up connections



View your active networks

Network 218
Public network

Change your networking settings

- Set up a new connection or network
Set up a wireless, broadband, dial-up, ad
- Connect to a network
Connect or reconnect to a wireless, wired
- Choose homegroup and sharing options
Access files and printers located on other
- Troubleshoot problems
Diagnose and repair network problems, o

See also

- HomeGroup
- Internet Options
- Windows Firewall

Local Area Connection Status

General

Connection

IPv4 Connectivity:	No Internet access
IPv6 Connectivity:	No Internet access
Media State:	Enabled
Duration:	01:07:34
Speed:	100.0 Mbps

Details...

Activity

Sent	Received
Bytes: 1,386,005	4,098,819

Properties Disable Diagnose

Close

Click on Properties

Control Panel Home

- Manage wireless networks
- Change adapter settings
- Change advanced sharing settings

View your active networks

- Network 218**
Public network

Change your networking settings

- Set up a new connection or network
Set up a wireless, broadband, dial-up, ad
- Connect to a network
Connect or reconnect to a wireless, wired
- Choose homegroup and sharing options
Access files and printers located on other
- Troubleshoot problems
Diagnose and repair network problems, o

See also

- HomeGroup
- Internet Options
- Windows Firewall

View your basic network information and set up connections



View your active networks

- Network 218**
Public network

Change your networking settings

- Set up a new connection or network
Set up a wireless, broadband, dial-up, ad
- Connect to a network
Connect or reconnect to a wireless, wired
- Choose homegroup and sharing options
Access files and printers located on other
- Troubleshoot problems
Diagnose and repair network problems, o

Local Area Connection Properties

Networking | Sharing

Connect using:
Realtek PCIe GBE Family Controller

This connection uses the following items:

- Client for Microsoft Networks
- Network Filter Driver
- QoS Packet Scheduler
- File and Printer Sharing for Microsoft Networks
- Internet Protocol Version 4 (TCP/IPv4)
- Link-Layer Topology Discovery Mapper I/O Driver
- Link-Layer Topology Discovery Responder

Buttons: Install... Uninstall Properties

Description
Transmission Control Protocol/Internet Protocol. The default wide area network protocol that provides communication across diverse interconnected networks.

Buttons: OK Cancel

Click here then Properties



The screenshot shows the Windows Control Panel's Network and Sharing Center. The main window displays network status for 'RAVISOLANKI-PC (This computer)', 'Network 218', and 'Internet'. A 'Local Area Connection Properties' dialog box is open, with the 'Sharing' tab selected. Overlaid on this is the 'Internet Protocol Version 4 (TCP/IPv4) Properties' dialog box, with the 'General' tab active. The 'General' tab contains the following settings:

- Obtain an IP address automatically
- Use the following IP address:
 - IP address: 192 . 168 . 1 . 14
 - Subnet mask: 255 . 255 . 255 . 0
 - Default gateway: 192 . 168 . 1 . 1
- Obtain DNS server address automatically
- Use the following DNS server addresses:
 - Preferred DNS server: 8 . 8 . 8 . 8
 - Alternate DNS server: 9 . 8 . 4 . 4
- Validate settings upon exit

Buttons for 'Advanced...', 'OK', and 'Cancel' are visible at the bottom of the dialog box.

Do configuration of IP as shown in image, then click OK

Note : IP address range from 192.168.1.2 to 192.168.1.253



Step 2 : Configuration of Modem


Protected Object

This object on the RomPager server is protected

Now enter 192.168.1.1 in browser

User Name : admin

Password : admin

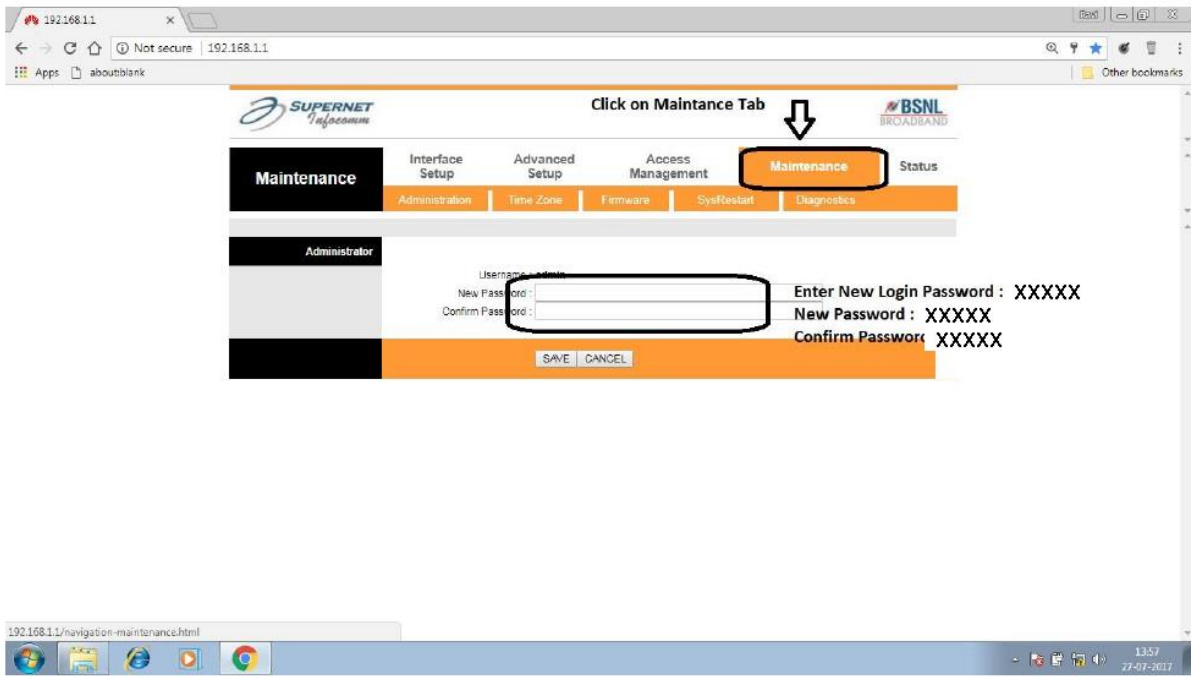



Maintenance	Interface Setup	Advanced Setup	Access Management	Maintenance	Status
	Administration	Time Zone	Firmware	SysRestart	Click on SysRestart Tab

System Restart

System Restart with : Current Settings
 Factory Default Settings

	RESTART	Click on RESTART
--	----------------	------------------

Your modem will take 2 - 3 min to start again.